



DEEP DOME LAMP FIXTURE

Deep Dome Lamp Fixture™.
ITEM# LF-17

ENGLISH INSTRUCTIONS:



READ AND SAVE ALL SAFETY INSTRUCTIONS BEFORE OPERATING LAMP FIXTURE

Congratulations on your purchase of Zoo Med's Deep Dome Lamp Fixture™! The following instructions will assist you with the proper set-up and operation of this unit. Please read the following instructions carefully. If you have any questions regarding these instructions or the proper use of this product, please contact our customer service department at the phone or email address listed below. Thank you for purchasing a quality Zoo Med product!

FEATURES:

- Ceramic Socket rated up to 160 watts.
- Extra long reflector dome extends beyond the face of the lamp, preventing the lamp from "sticking out."

- Perfect for use with Zoo Med's PowerSun® UV lamps and ReptiSun® UVB Compact Fluorescent lamps.
- Highly polished aluminum inside the dome greatly increases UVB and UVA output.
- Includes On/Off switch for greater convenience.

SAFETY INSTRUCTIONS:

WARNING! RISK OF FIRE: In order to reduce the risk of fires or electric shock, read and save these instructions prior to operation.


- DO NOT exceed electrical rating.
- DO NOT splice, repair, or modify. Fully extend cord before using.
- For indoor use only.
- DO NOT use in wet conditions. Not for use with aquariums.
- Keep children and pets away from fixture.
- Fully insert plug. Unplug power cord before inserting or changing bulb.
- Unplug when not in use.
- To avoid possible electric shock, DO NOT insert objects other than appropriately rated light bulbs into socket.
- DO NOT cover with blankets, rugs or any material.
- DO NOT operate the unit with a damaged cord, plug, or other component. If the cord is damaged, discard the lamp.
- DO NOT alter or modify this product. Contact an electrician if you are unsure about the electrical connection.
- This unit has no user-serviceable parts. Do not attempt to examine or repair this product yourself.
- NOT for use with Ceramic Heat Emitters.
- Make sure that clamp lamp is SECURELY suspended above the terrarium. Zoo Med's Reptile Lamp Stand™ (Item LF-20) is a good choice for suspending this lamp.

OPERATING INSTRUCTIONS:

Be sure that the lamp is unplugged and that the switch is in the "off" position before installation. Insert an appropriately rated lamp into the fixture. Securely suspend the lamp fixture in the desired safe location above your terrarium. Zoo Med's Reptile Lamp Stand™ (Item LF-20) is a good choice for suspending this lamp fixture above your terrarium as shown. This lamp fixture can get hot and is designed for use outside of the terrarium. Do not allow children or your terrarium animals to contact heat lamps or this lamp fixture. Read all safety instructions before use.



**DEEP DOME LAMP FIXTURE SUSPENDED
FROM REPTILE LAMP STAND**

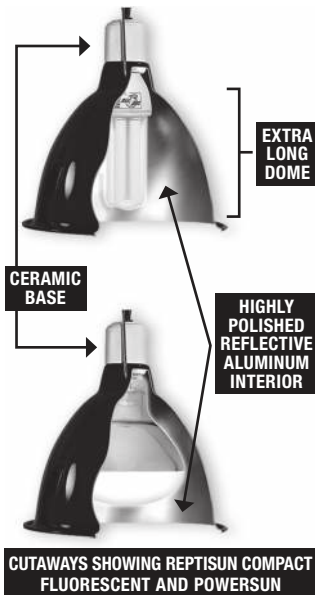

**EXTRA
LONG
DOME**

**CERAMIC
BASE**

**HIGHLY
POLISHED
REFLECTIVE
ALUMINUM
INTERIOR**

**CUTAWAYS SHOWING REPTISUN COMPACT
FLUORESCENT AND POWERSUN**

RECOMMENDED FOR USE WITH THE FOLLOWING PRODUCTS:

- PowerSun® UV mercury vapor UVB (item# PUV-10, PUV-11).
- Reptisun® 5.0 or 10.0 compact fluorescent lamp.
- Reptile Lamp Stand™.



**LF-20 REPTILE
LAMP STAND™**

**REPTISUN® 10.0 COMPACT
FLUORESCENT LAMP**



**REPTISUN® 5.0 COMPACT
FLUORESCENT LAMP**



POWERSUN® UV

WARRANTY:

Zoo Med Laboratories, Inc. (Zoo Med) warrants this product to be free of defects in material and workmanship under normal use and service for one year from the date of purchase. The obligation under this warranty is limited to the repair or replacement, at Zoo Med's discretion, of the product or any part thereof, when the product is returned to Zoo Med, freight prepaid. No claim shall be allowed under this warranty if, in the opinion of Zoo Med, this product has been subject to accident or improper usage, including but not limited to: water damage, improper storage, accidental dropping, etc. This warranty is in lieu of all other warranties and representations express or implied. Please include your receipt, full name, address, phone number, and email address along with a note explaining failure when sending any product back to Zoo Med. Please allow 4 to 6 weeks for repair or replacement.

ZOO MED LABORATORIES INC.
3650 Sacramento Drive
San Luis Obispo, CA 93401 USA
Phone: (805) 542-9988
www.zoomed.com